

RAIMONDI

Cast Gate, Globe and Check Valves ATEX - Operating and Safety Instructions

Additional Safety Instructions for Valves and Accessories being used in a Potentially Explosive Atmosphere under ATEX 94/9

Reference

These are additional safety instructions to PED document numbers: RAILT-0016, RAILT-0017, RAILT-0018 and RAILT-0019.

See also: www.pentair.com/valves

Markin

ATEX 94/9/EC, Group II, category 2, GD.

Selectio

- Ensure that the equipment is marked with the correct equipment group, category and type of atmosphere for the application and that the safety instructions are followed for each item of the equipment.
- In particular, all items included in an actuator package, including valve, actuator and all
 accessories should be CE marked to ATEX in the appropriate and / or requested category.
- The temperature classification of valves is entirely dependent on the process fluid passing through the valve. If relevant, this must be established by the end user and must not exceed the maximum temperature rating of the valve, marked on the valves identification label.

Installation

- The installer must only use tooling appropriate to the working area, see EN 1127-1 Annex A.
- Installation has to be carried out at ambient temperature.
- During installation ensure that no metallic shocks / impacts are made to the equipment or the adjacent pipework.
- · Ensure that the equipment is suitably earthed, through the pipe or individually.
- The installer should thoroughly follow the operating and safety instructions provided for each individual item of equipment.
- When the valve is to handle hot fluids or fluids where exothermic reactions may take place, the end user must take al the necessary measures to ensure that the hot surface of the valve cannot provide a source of ignition to the surrounding gas, vapor, mist or dust atmosphere.
- Before putting into use or during operation with a dangerous fluid, ensure that no release of the fluid to atmosphere can take place.

Maintenance

- The operator must ensure that only personnel qualified to work in a potentially hazardous area are allowed to carry out maintenance appropriate to the category of the equipment in use.
- The end user must ensure that only tooling appropriate to the working area is used, see EN 1127-1 Annex A.
- All equipment must only be fitted with manufacturer's original spare parts.
- For valves with butt welding ends: welding and cutting operations shall be carried out in a safe working environment and with all relevant cautions.

\mathbf{v}	YEAR	1	TYPE	2	SIZE	3		CLASS	(4)	ΔΡ (19	
\mathbb{R}	BODY	5)	STE	EM	6	SEAT		7	DISC	8	
$\overline{\checkmark}$	DES	9)	Τ	0	P	\bigcirc		Shel l	Test	12	
Ó	⊕ Tm	in	\bigcirc	P		14	Tmax	(5	Ρ	16	Ð
$ \Psi $	TAG			17				S/.	N	(1	3)	
	ty	co/a	low Contro	v ra	ima	Indi	MANUFACTURER: TYCO VALVES & CONTROLS ITALIA S.R.L. RAIMONDI MFG PLANT – RESCALDINA (MI)-ITALY					

Tagplate reference

Pos. Description

- 1. Year of Construction
- 2. Valve Type
- 3. Nominal Diameter
- 4. ANSI Class
- 5. Body Material
- 6. Stem Material
- 7. Seat Face Material
- 8. Disc Face Material
- 9. Designed Code
- 10. Room Temperature
- 11. Pressure at Room Temperature
- 12. Pressure Shell Test
- 13. Min. Allowable Temperature
- 14. Pressure at Min. Allowable Temperature
- 15. Max Allowable Temperature
- 16. Pressure at Max. Allowable Temperature
- 17. Valve Tag
- 18. Serial Number
- 19. Differential Pressure